


CABLE COLOURS

- 00 = BLACK
- 11 = BROWN
- 22 = RED
- 33 = ORANGE
- 44 = YELLOW
- 45 = YELLOW / GREEN
- 66 = BLUE
- 77 = PURPLE
- 88 = GREY
- 99 = WHITE
- 92 = WHITE / RED
- 96 = WHITE / BLE

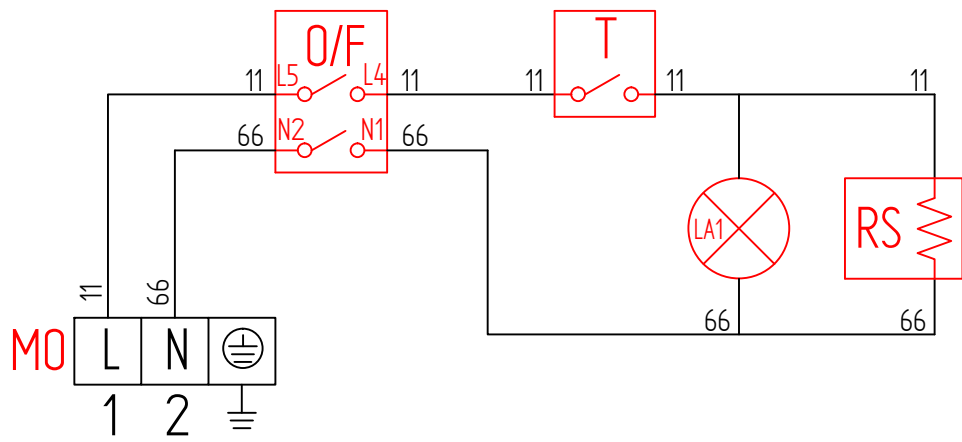

- L = PHASE (POWER SUPPLY)
- LA1 = ORANGE LIGHT ON/OFF HEATING ELEMENT
- MO = THERMINAL
- N = NEUTRAL (POWER SUPPLY)
- O/F = ON / OFF SWITCH
- RS = BOTTOM HEATING ELEMENT
- T = THERMOSTAT FOR COOKING CHAMBER